


#### Installation for screen:


- Use tape to measure the overall length and height of screen. Then apply the following formula to calculate the distance of mounting brackets (please check below). Finally align the mounting brackets horizontally and vertically.

a: Horizontal distance:  $0.6 \times$  overall length of screen

b: Vertical distance: overall height of screen minus 96mm.

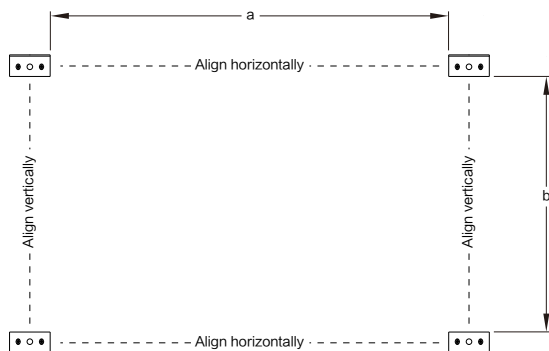

- Slide the nut plates preinstalled in long black velvet frame to align with mounting brackets. Then drive tightly the Phillips screws with nut plates to finish installation of screen.

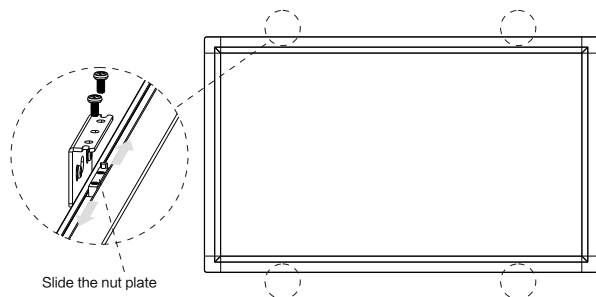

# Grandview®

## Maintainance

In order to maintain good performance of screen, please cover the screen with cloth if it is not used for a long term to prevent dust and dirt from screen. If there are apparent varis or dirt on screen material, please use soft brush or cloth to clean it.

## Clean the screen material

Rub gently according to grain of velvet frame with warm water mixed with soft detergent. (Please be noted that it should be gently rubbed instead of scrubbing hard). Please prevent from hitting the frame in case of damage of velvet. By finishing cleaning, let frames dry itself.

Please do not use any dissolvent, chemical agent or any tool with strong friction for clean, which would cause permanent damage to the screen.

# Grandview®



User Manual for Prestige Series Fixed Frame Screen

Model: PP-xx (R1)

**GRANDVIEW CRYSTAL SCREEN CO., LTD.**

No. 43 South International Trade Avenue, Hualong,

Panyu, Guangzhou, GuangDong, P.R.C

Tel: +86-20-84899499

## Dear Customer:


Thanks for your purchasing Grandview product of Prestige Series Fixed Frame Screen. Please go through the user manual before use. Please keep the user manual well for future reference.

## Preparation for installation

### Parts:




Long black velvet frame × 2 pcs



Short black velvet frame × 2 pcs




Mounting bracket × 4 pcs



Screen material × 1 pcs



Spring X some



Long tension rod × 2 pcs


Short tension rod × 2 pcs



Grub hexagon screw × 4 pcs



Phillips screw × 8 pcs



tapping screw × 8 pcs  
expansion fixture × 8 pcs



### Accessory tool:



Hook handle × 1 pcs

- Please prepare for suitable tools such as gradienter, tape, marker, hexagon key, etc
- Please make sure precise installation distance and proper installation position for upper and nether mounting brackets.
- Use the proper screws for installation according to the site. (use tapping screws for wooden wall and tapping screws with expansion fixture for concrete wall)

## Instruction for installation

### Assembly of frames:


- Put the long and short frames on clean floor with the rear side up to form a rectangle shape, please see below:

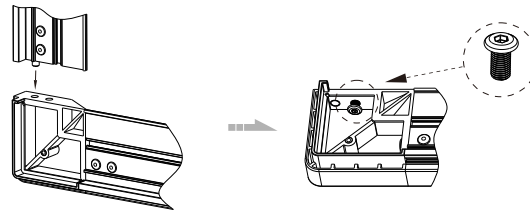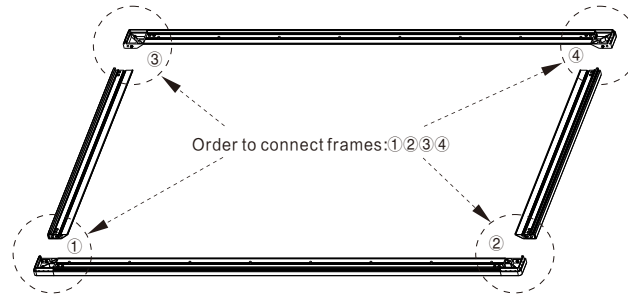


- Connect long frame with short frame by inserting locating pin on short frame into the hole on long frame. Then insert grub hexagon screw to drive tightly with hexagon key according to the order mentioned above.

### Installation of screen material:

- Face the screen material rear side up and lay it flat on clean floor. Insert the tension rod from the tunnel of screen material (advise to insert tension rod by two people to avoid damage of fabric). Please check below:

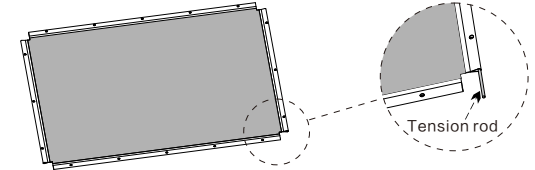

- Lay flat screen material on the connected frame (both of frame and screen material should face rear side up). Hitch the tension rod with big ring of spring, then the small ring on the other side to hitch slot of frame one by one. It is advised to manage the springs on long frames first (use the hook handle for assistance if needed). Please check below:

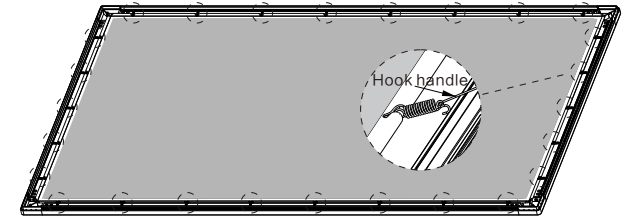

- After hitching all of springs with screen material, necessary adjustment would be needed to make to assure screen material has no wrinkles with well-distributed tension.

